



BARCODE SCAN SHEET

#1 – Support Menu



012345678900

#2 – Video Player



012345678901

#3 – Update from USB



012345678913

#4 – Update from Network



012345678902

#5 – Shutdown Device



012345678904

#6 – Restart Device



012345678903

#7 – Restart Kiosk



012345678906

#8 – Not Used



012345678907

#9 – Manage Playlist



012345678908

#10 – Save Playlist



012345678909

#11 – Delete Playlist



012345678910

#12 – Enable Wi-Fi



012345678911

#13 – Disable Wi-Fi



012345678912

#14 – Configure Network



012345678905